

Rear Access

1. Pull access pad upward and then rearward to remove. See Figure 18.

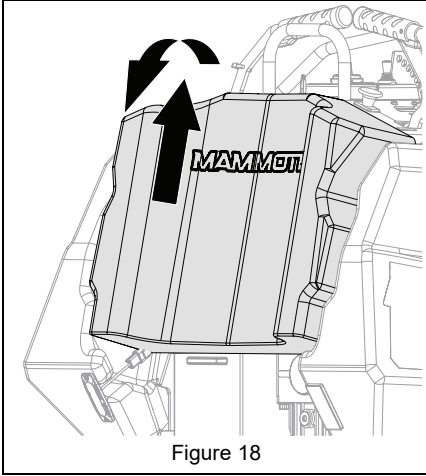


Figure 18

2. Remove and retain hex bolts securing rear access panel to frame. Remove access panel. See Figure 19.

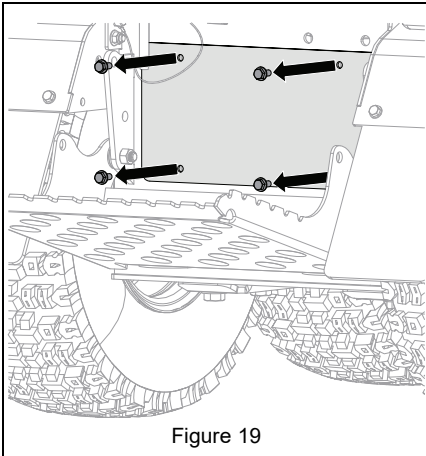


Figure 19

MAINTENANCE SCHEDULE

Service Performed	Each Use	Every 50 hrs.	Every 100 hrs.	Every 250 hrs.	Every 400 hrs.	Every 500 hrs.
Check Engine Oil *	•					
Change Engine Oil *			•			
Check Air Cleaner Secondary Element *				•		
Replace Air Cleaner Primary Element *				•		
Replace Air Cleaner Secondary Element *						•
Change Air Filter *				•		
Clean Engine Cooling System			•			
Check Safety Interlock System	•					
Check Hydraulic System	•					
Check Tire Pressure	•					
Lubricate Unit		•				
Check Parking Brake	•					
Clean Battery			•			
Check Fasteners			•			
Check Belts			•			
Change Hydraulic Oil and Filter **		•				•
Change Gearcase Oil ‡					•	

* Refer to engine manual for instructions.
 ** Change after first 200 hours and every 500 hours thereafter.
 ‡ Change after first 100 hours and every 400 hours thereafter.